EGE	EXCEL CELL ELECTRONIC CO., LTD.	NO.		A31228	3
	SPECIFICATION	Edition	2	Page	1

# ECS - INDUSTRIAL CONTROL SWITCH SELECTOR

#### 1. FEATURES

- Up to 5 different operations.
- Detachable contact block for easy installation and removal. It can meet variety of needs and improve work efficiency.
- IP65 waterproof type. It is designed for liquid and oil prevention and enables to be used in different environment.
- In accordance with the standards of UL, cUL, CE, CCC, and TUV.

#### 2. SPECIFICATIONS

2-1. ELECTRICAL	
2-1-1. Rated thermal current	
2-1-2 Rated insulation voltage	

2-1-3. Utilization category

2-1-4. Minimum switching capacity [ref.]

2-1-5. Dielectric strength 2-1-6. Insulation resistance 2-1-7. Contact resistance

2-2. MECHANICAL AND ENVIRONMENTAL

2-2-1. Operating temperature

2-2-2. Storage temperature

2-2-3. Humidity

2-2-4. Degree of protection 2-2-5. Degree of contamination

2-2-6. Vibration resistance

2-2-7. Shock resistance

2-2-8. Mechanical Life

2-2-9. Electrical Life

2-2-10. Operation Force(from 1a1b)[ref.]

2-2-12. Connection type 2-2-13. Direct opening action

10A 650V

AC-15(A600) or Ue 240V / le 3A Ue 380V / le 1.9A

DC-13(P600) or Ue 250V / le 0.55A

3V DC/AC, 5mA 2500V AC, 1 min.

 $100M\Omega$  min. at 500V DC

50mΩ max. (initial)

-25°C ~ +70°C

(without icing or condensation)

 $-25^{\circ}$ C ~  $+55^{\circ}$ C (for illuminated type)

-40°C ~ +85°C 45% ~ 85% RH

IP65 (from the front of the panel)

3 (IEC 60947-5-1)

10-55Hz amplitude 0.5mm 100 m/s<sup>2</sup>(10G)(malfunction) 1000 m/s<sup>2</sup>(100G)(destruction)

500,000 operations(for momentary type)

frequency 1800 operations/hr 500,000 operations(for maintained type)

frequency 1800 operations/hr

500,000 operations


frequency 1800 operations/hr 0.2 N-m (2- or 3- position type) 0.6 N-m (spring return type) M3.5 screw connection

Direct opening mechanism of NC

contact to open the circuit⊖


EXCEL CELL ELECTRONIC CO., LTD.	NO.		A31228	3
SPECIFICATION	Edition	2	Page	2

#### 3. CONSTRUCTION

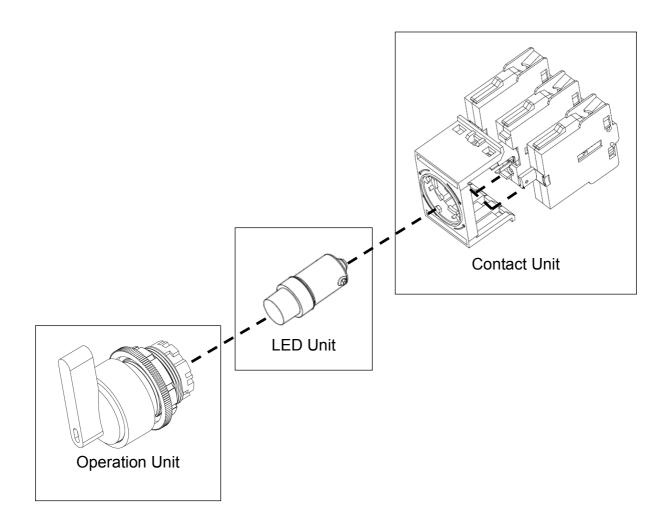

- Operation unit, LED unit, and contact unit (contact blocks) can be sold separately.
- Please see [4.Part numbering system] for operation unit part number. For other accessories (LED lamp, contact block, etc.), please refer to accessory part in catalog.

EXCEL CELL ELECTRONIC	C CO., LTD. NO.		A31228	3
SPECIFICATION	Edition	2	Page	3

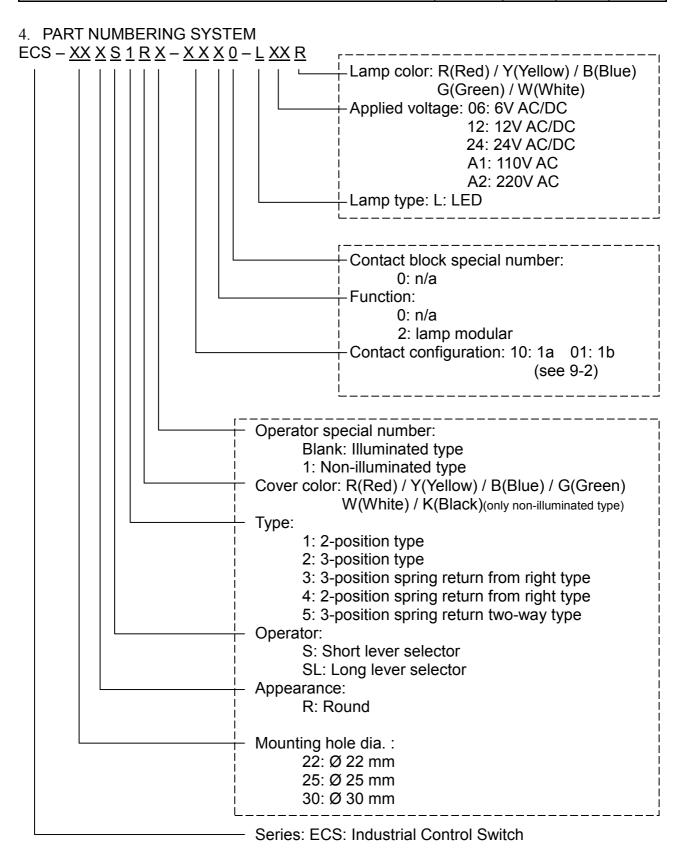




#### 5. INSTALLATION

#### 5-1. Panel thickness

- The panel thickness must be 1 to 7 mm.
- Take into consideration about the thickness of accessories (such as name plate, switch guard, etc.) while using.

#### 5-2. Panel cutout

Cutout diameter and distance




			Unit: mm
	22R / 25R	22Q / 25Q	30R
Α	22.3/25.3 +0.4	22.3/25.3 <sup>+0.4</sup>	30.5 <sup>+0.5</sup>

Unit: mm

Unit: mm


	22R / 25R	22Q / 25Q	30R	Long Lever Selector Switch Emergency Stop Switch
X	30	32	50	50
Υ	50	50	65	50

## ■ Key recess cutout (22mm only)




		Offic. Hilli
Mounting Hole(Ø)	а	b
22	24.1 <sup>+0.5</sup> <sub>-0</sub>	3.2 <sup>+0.2</sup> <sub>-0</sub>

#### Panel installation

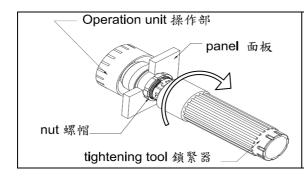

- 1. Place the operation unit through panel mounting hole.
- 2. Install the nut by using tightening tool
- 3. Make sure the operation unit fix on the panel firmly.


#### 5-3. Operation unit and contact unit installation

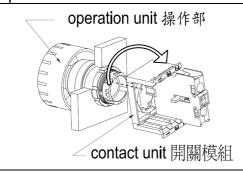


- 1. Fix the operation unit on the panel.
- 2. Connect the operation unit with snap-fit joint part of contact unit.
- 3. Rotate contact unit to fix firmly as shown in the left figure.

EGE	EXCEL CELL ELECTRONIC CO., LTD.	NO.		A31228	3
	SPECIFICATION	Edition	2	Page	5

### 5-4. LED lamp installation

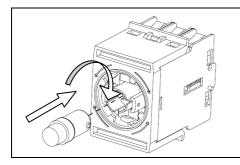

- 1. Aim LED lamp to the lamp holder and press down to the bottom.
- 2. Rotate the LED lamp to make sure the lamp is firmly installed.
- 3. While installation and removal, please hold the metal part of LED lamp to avoid damaging LED lamp.

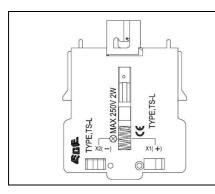

- When using DC LED lamp, please connect the positive pole (+) to X1 terminal as shown in left figure.
- 2. The LED lamp may be erroneously lightened by a leaking current from the circuit. The malfunction can be prevented by connecting a shunt resistor in parallel with the LED lamp.

(6) QC inspection stamp

(7) Company mark

(8) Company name

(9) Notice

#### 6. PACKAGING

- 6-1. ECS product is packed without assembly (packed by set), 10 sets per box.
- 6-2. Label information
  - (1) part number
  - (2) Lot number
  - (3) Quantity
  - (4) Tester number
  - (5) Date code
- 7. DIMENSIONS
  - 7-1. See attached drawings
- 8. OPTIONS
  - 8-1. Key recess type operation unit is available (22mm only)
  - 8-2. Ø22mm and Ø25mm type have the same structure. Different thickness of O-rings can be ordered separately to fit into Ø22mm and Ø25mm hole in the panel.
  - 8-3. LED Specification

LED Type	BA9S-T8
Durability(reference)	Approx. 50,000 Hrs.
Voltage	Printed on the LED

8-4. For other accessories (name plate, control box, and etc.), please refer to accessory part in the catalog.

EXCEL CELL ELECTRONIC CO., LTD.	NO.		A31228	3
SPECIFICATION	Edition	2	Page	6

#### 9. REMARK

## 9-1. Safety Certification

Safery Standard	Certification		
UL-508	UL / cUL , file NO. E155181		
CSA C22.2 NO.4	0E7 COE, IIIE NO. E133101		
EN60947-5-1	R50363071		
EN60947-5-5 (Emergency Stop Switch)	R50362996		
CCC GB14048.5	2016010305912684		

9-2. Contact Configuration

2. Conc		_	.iOi i	
Code		itact cks	without function block	with function block
	NO	NC	•	•
10	1	0	•	•
01	0	1	•	•
11	1	1	•	•
20	2	0	•	•
02	0	2	•	•
12	1	2	•	•
21	2	1	•	•
30	3	0	•	•
03	0	3	•	•
31	3	1	•	•
13	1	3	•	•
22	2	2	•	•
40	4	0	•	•
04	0	4	•	•
41	4	1	•	
14	1	4	•	
23	2	3	•	
32	3	2	•	
50	5	0	•	
05	0	5	•	
	Domark			

#### Remark:

- The colors of contact block are the followings: 1 NO: green, 1 NC: red
- Maximum 5 contact blocks for every contact unit.

#### 9-3. CAUTION

- To prevent injury, this device must be disconnected from all power sources prior to wiring and other initiating work.
- Use tightening tool when installing the operation unit in the panel cutout. Do not use pliers and do not tighten excessively, otherwise the operation unit may be damaged.
- Make sure contact blocks are firmly fixed on contact holder during assembly. It will avoid contact blocks separated from holder during operation.

